

Replace rotor Check distributor cap (replace if necessary) Check timing (adjust if necessary) Check ignition wires (replace if necessary) Check ignition performance (firing voltage and ignition patterns) Check idle speed (adjust if necessary) Check choke (carbureted engines)

Clean fuel injectors

Check compression and/or power balance (identifies bad fuel injectors as well as compression problems)

Check manifold intake vacuum (reveals exhaust restrictions)

Check battery/charging voltage Check exhaust emissions (verifies fuel mixture, ignition performance and emissions performance)

Check vehicle computer for trouble codes Install new air filter Replace fuel filter

Replace PCV valve

Check all emission controls (EGR valve, air pump, etc.) Check all vital fluid levels (engine oil, transmission fluid, coolant, brakes, power steering) Check safety items such as lights, wipers, tires (including inflation pressure), horn, etc.